## **SPECIFICATION**

This cable length mater can be read to macross special who (or cable). After you connect the mater to the two each of the who be measured, the display will show the length of the who epickly. In normal measurement mode, the mater can measure or abundance of a case who of a carbifologib, user can measure the lengths of the some Mindwise by using this sweding than cable or, in addition, the mater can measure residence according. It is a very useful for the whole display in the weather in addition, department, decitical contractors, building feeder, and also.



	current is about 10 μ A.
Battery	1.5V battery, AA or equivalent, 6 pieces
Operating Current	About 4mA when there is no object
	being tested and the backlight and
	built-in buzzer are off; or
	about 8mA when the backlight is on
Operating Environment	0°C - 40°C, < 75%RH
Storage Environment	-20°C - 60°C, < 85%RH
Size	198mmX98mmX56mm
weight	about 518g (including battery)

Length Measurement Range	0 - 100000ft, or 0 - 30000m
Length Measuring Ranges	1000m/10000m/30km, or 1000ft/10000ft/100kft
Length Resolution	0.1m/1m/0.01km, or 0.1ft/1ft/0.01kft
Length Measurement Accuracy	±( 1%rdg + 3ft or 1m )
Resistance Measurement Range	0.1mΩ - 1999.9Ω
Resistance Measuring Ranges	1Ω/10Ω/100Ω/2000Ω
Resistance Resolution	$0.1 m\Omega/1 m\Omega/0.01 \Omega/0.1 \Omega$
Resistance Measurement Accuracy	±( 1%rdg + 3 digits )
Temperature Measurement Range	0°C-40°C
Temperature Measurement Accuracy	±1.5°C
Overload Protection	Max. 50V between terminals
Sleep Mode	The meter goes into Sleep mode after
	about 10 minutes of inactivity, the sleep